

**Agilent 4395U Option 010
Impedance Measurement Function Upgrade Kit
Upgrade Manual**



**Agilent Part No. 04395-90101
Printed in JAPAN July 2000**

Notice

The information contained in this document is subject to change without notice.

This document contains proprietary information which is protected by copyright. All rights are reserved. No part of this document may be photocopied, reproduced, or translated to another language without the prior written consent of the Agilent Technologies.

Agilent Technologies Japan, Ltd.
Component Test PGU-Kobe
1-3-2, Murotani, Nishi-ku, Kobe-shi,
Hyogo, 651-2241 Japan

General Information

Introduction

This chapter describes the Update Kit, and lists the contents of the kit.

The Option 010 Upgrade Kit

The purpose of the kit is to install the Impedance Measurement Function into the 4395A. This kit is installable by customers.

Contents of the 4395U Option 010

The kit includes the parts listed in Table 1-1. Confirm that there are no missing parts. If anything is missing, contact the nearest Agilent Technologies office.

Table 1-1. Contents of the 4395U Option 010 Upgrade Kit

Description	Agilent PN	Qty.
Flexible Disk Option 010 Upgrade	04395-18008	1
Label "OPTION 010"	5080-3939	1
Upgrade Manual (this manual)	04395-90101	1

Option Installation

Introduction

This chapter describes the procedure to install the Option 010 to the 4395A.

Installation Procedure

The installation is performed by running the program stored in the furnished flexible disk. Perform the following steps to upgrade the Option 010 software:

1. Insert the furnished flexible disk to the flexible disk drive of the 4395A.
2. Turn on the 4395A.
3. "Option 010 installation in progress" is displayed on the LCD.
4. Wait until "Option 010 installation complete" is displayed on the LCD.
5. Remove the flexible disk from the 4395A.
6. Turn the 4395A off and then on.
7. Confirm that "OPTIONS: 010" is displayed on the LCD.

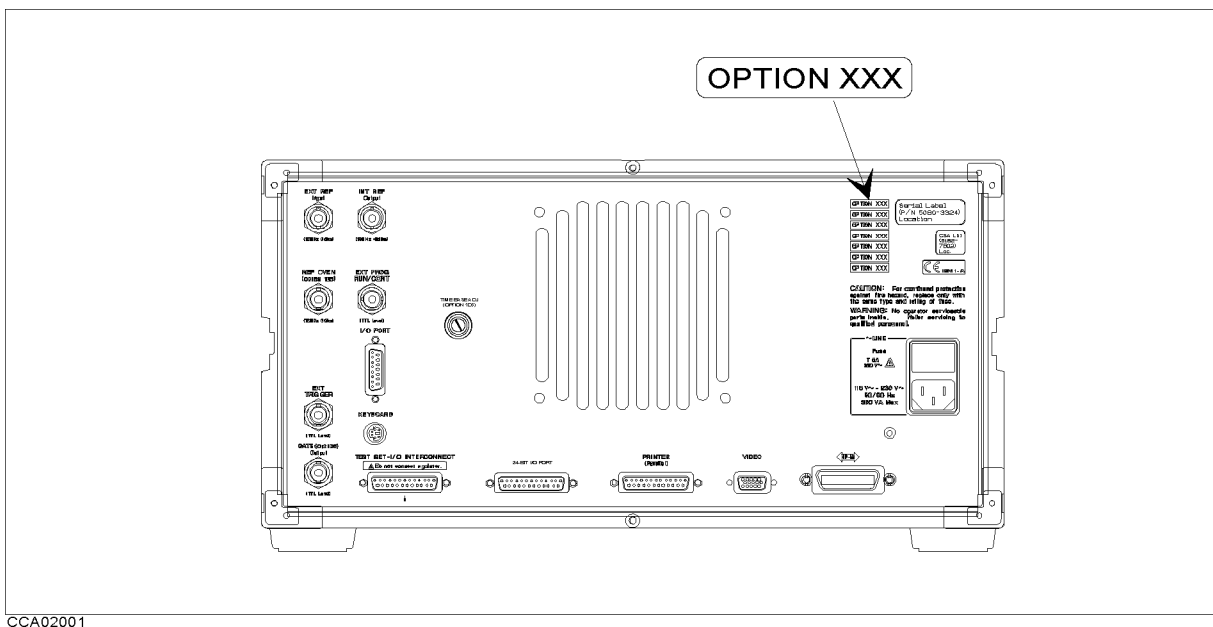


Figure 2-1. 4395A rear view

8. Put the option label on the rear panel as shown in the Figure 2-1.

